

VERSUSGAS WIRING 6-CYL. SCHEME

BLACK PLUG PINS:

- D8 PCTR 1
- D9 PCTR 2
- D6 PCTR 3
- A8 PCTR 4
- A6 PCTR 5
- D8 PCTR 6
- B4 PCTR 7
- C3 PCTR 8
- C7 ECU 1
- B7 ECU 2
- A6 ECU 3
- A7 ECU 4
- B5 ECU 5
- A4 ECU 6
- C4 ECU 7
- C1 LPG 1
- C2 LPG 2
- B1 LPG 3
- A1 LPG 4
- B2 LPG 5
- A2 LPG 6
- A3 LPG 7
- B3 LPG 8

GREY PLUG PINS:

- B1 MAIN POWER SUPPLY (KEY +12V)
- A3 BATTERY (BAT +12V)
- A4 MAP-SENSOR (MAP)
- B2 MAP-SENSOR (+12 V)
- B3 FUEL LEVEL SENSOR (FUEL)
- B4 LPG TEMP SENSOR
- C4 LPG TEMP SENSOR-REDUCER
- A2 CONSOLE (PWR +12V)
- C7 CONSOLE (BUTTON)
- B7 CONSOLE (BUZZER)
- A7 CONSOLE (LED1)
- C6 CONSOLE (LED2)
- A6 CONSOLE (LED3)
- B6 CONSOLE (LED 4)
- C1 GROUND
- C5 MAP-SENSOR FOR CALIBRATION PROCEDURE
- A5 LAMBDA OXYGEN SENSOR
- A1 RPM SIGNAL
- C8 LPG INJECTORS-POWER SUPPLY (LPG +12V)
- B8 LPG VALVE +12V
- A5 DIAGNOSTICS (Ro)
- B6 DIAGNOSTICS (Ti)
- C3 DIAGNOSTICS (+12V)

